


METRIS-INT

METRIS CANBUS ALARM INTERFACE INSTALLATION INSTRUCTIONS

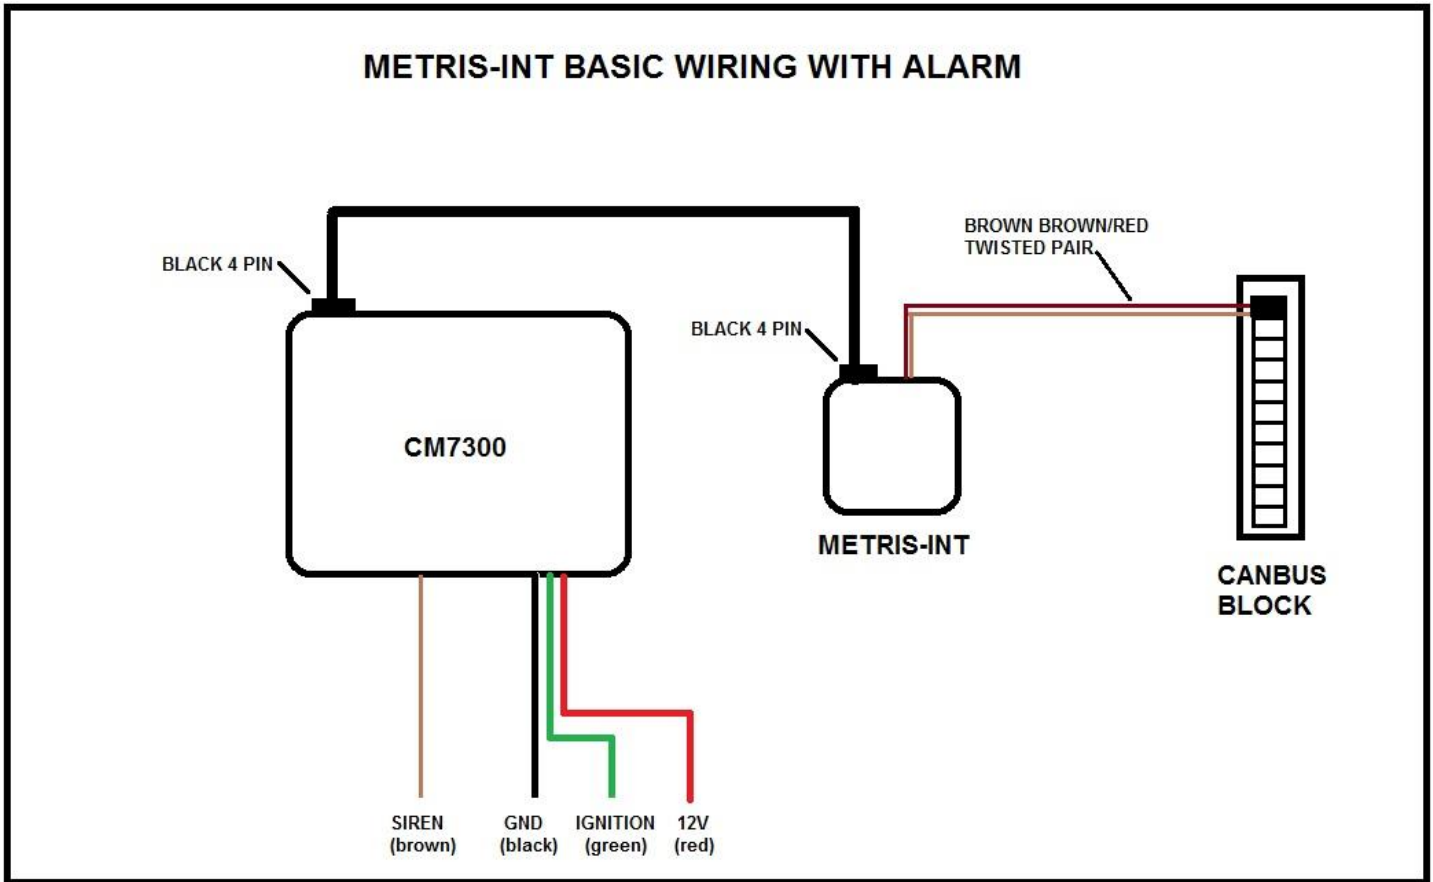


Note 1: All connections are made on the passenger side of the vehicle at the foot well


Note 2: CANBUS connection point is located above passenger kick panel

Note 3: CANBUS wires are Brown and Brown/Red

Note 4: If CM7300 does not respond it may be because valet mode is enabled: to disable valet mode turn on ignition and tap the light blue/white wire (brake wire) to 12V constant ten times.

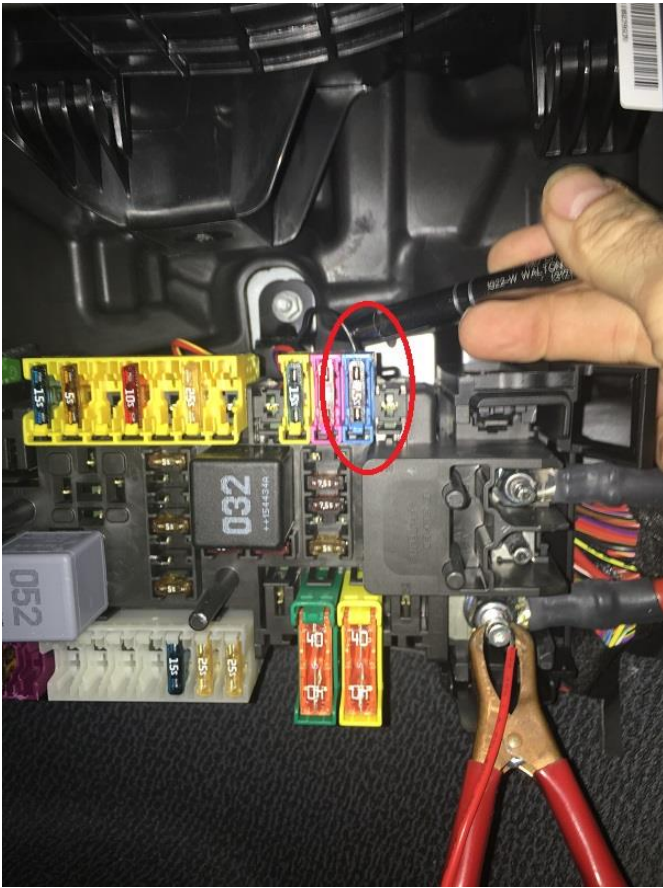

Ignition wire location

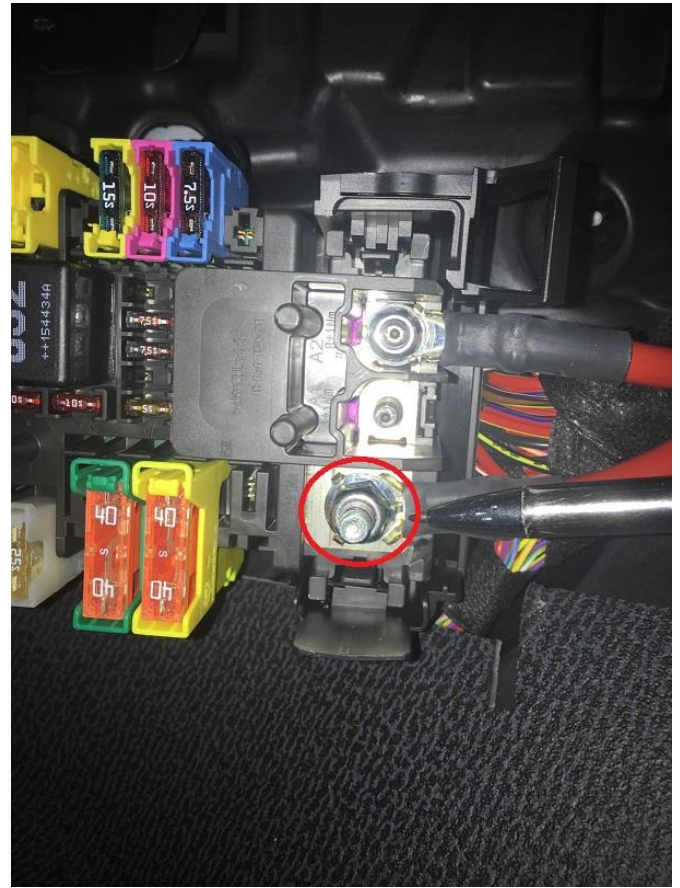

12 Volt Constant



Ground Connection



Vehicle CANBUS Block